



Partfill




Installation Instructions

- Flush Debris from pipe lines thoroughly before fitting
- Ensure valve is mounted horizontally in tank with outlet pointing down
- Use thread seal tape on inlet thread
- Set bottom stop at desired lower on position and tie off cord at end of arm. (Use double hole end loop system for easy adjustment and tie off) Keep bottom stop well away from tank outlet.
- Ensure weighted float is in correct position
- Cut off excess cord to desired length

NB: Avoid mounting valve directly next to an overflow outlet

Detach Feature

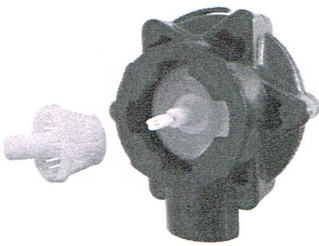


DETACH can be disengaged/re-engaged with water supply still flowing.

1. Remove valve body from DETACH adaptor.
2. Grip filter & pull off to clean.
3. Re-engage body to DETACH adaptor.

NB. Ensure float arm is held down when re-engaging valve.


Flow Graph

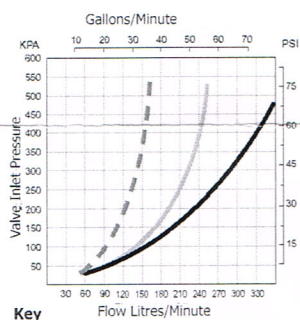

Key
 — 15mm (1/2")
 — 20mm (3/4")
 — 25mm & 32mm (1" & 1 1/4")

Pressure Range
 0.3 Bar - 10 Bar
 (5 psi - 150 psi)

Installation

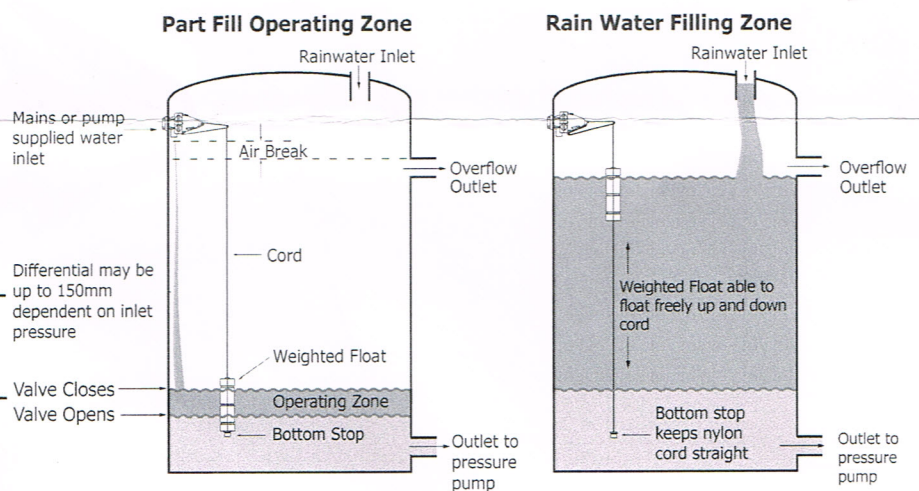

Warranty

We will repair OR replace Product that fails due to faulty parts or manufacture for 2 years from date of purchase.