


How to install a new Vent Button

The pressure relief buttons for our AWP filter housings in part number VENT BUTTON. This part comes with the following:

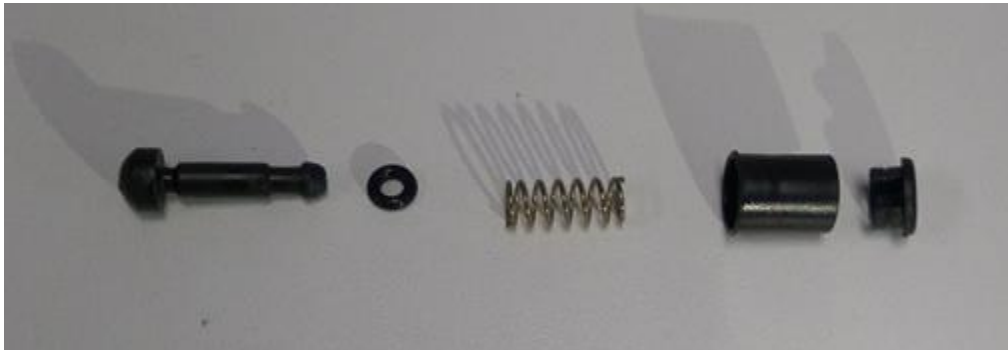

To remove the current vent button, you may require some pliers to pull out the pieces.

Instructions:

Step 1: Place the O-ring onto the plastic shaft, sliding it down to sit in the groove on the large end.



How to install a new Vent Button

Step 2: Push the small end of the shaft into the vent button hole from the bottom of the filter lid



Step 3: Place the spring over the shaft on the top side of the filter head.



How to install a new Vent Button

Step 4: Then add the cylinder with the small opening facing up- it will click down over the spring



How to install a new Vent Button

Step 5: Place the cap on top of the button.

